



Important Information Please Read First

• **Warning! Do not fit when surface temperature is below 10°C/50°F (see Adhesive information)**

Adhesive Information

The VHB tape adhesive takes 3 days to reach full 100% strength. The VHB adhesive is covered in microscopic bubbles filled with liquid adhesive. When the tape is pressed onto the ATM fascia, the pressure bursts the bubbles and releases the liquid adhesive that bonds to the ATM. When the environment is cold (which is why we say not to fit below 10°C/50°F) the liquid doesn't flow correctly which makes the bond weak. Also if there is any grease, moisture or dirt on the surfaces this will greatly reduce the bond strength and may cause the bond to fail (this can be seen if there is no adhesive residue left over on the ATM fascia). The primer helps the adhesive bond to the ATM and speeds up the curing process.


PINGuard™

PINGuard™


PINGuard Removal Kit

For other translations of this instruction sheet please email support@pinguard.com

www.PINGuard.com

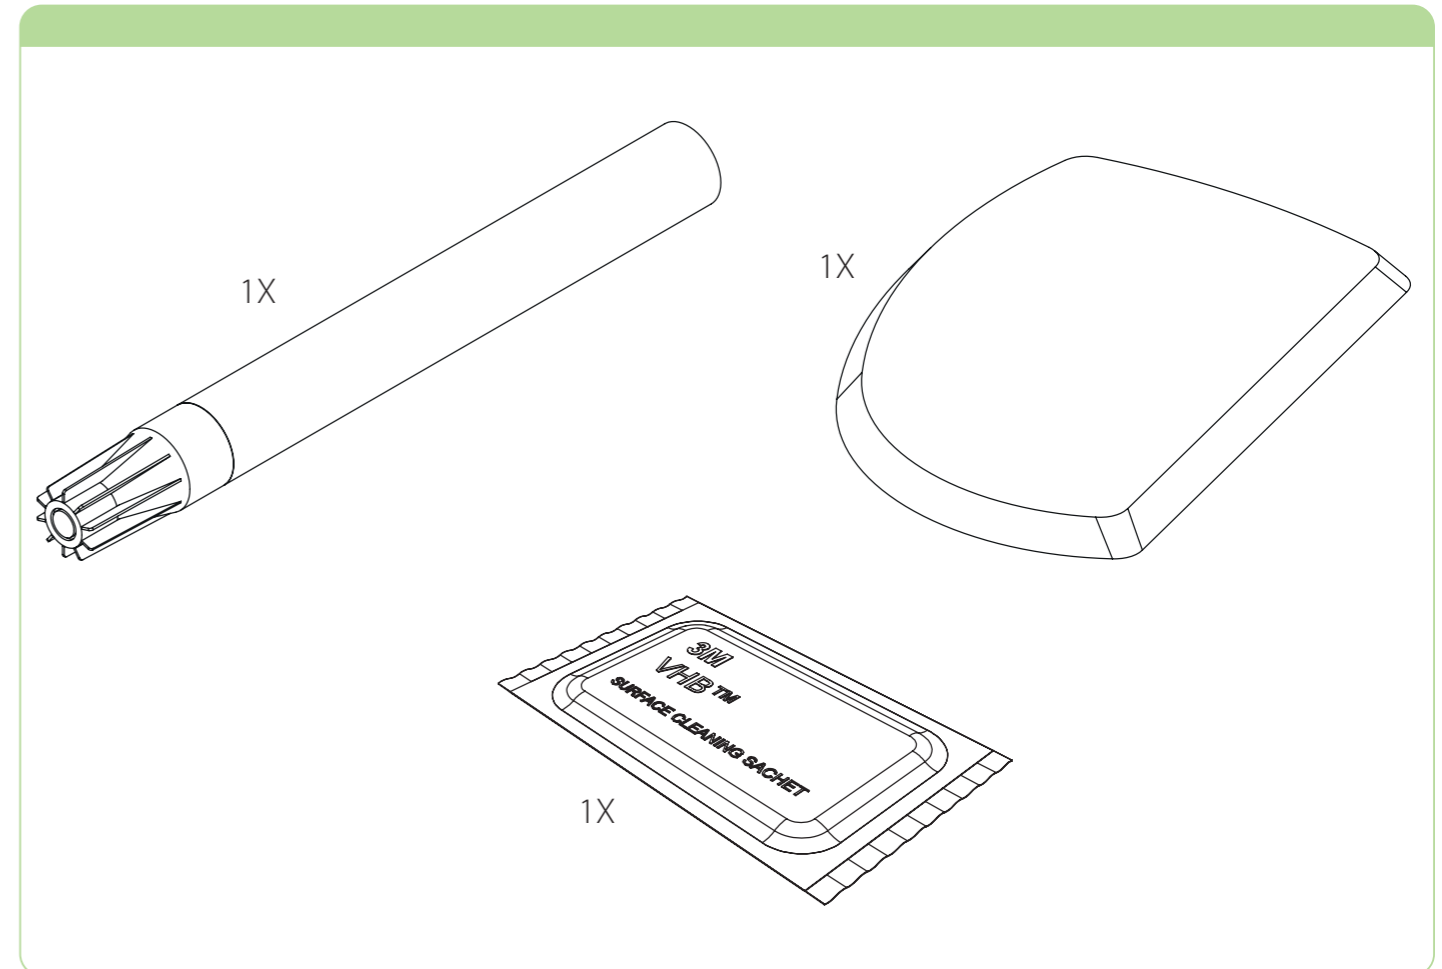

Removing Instructions

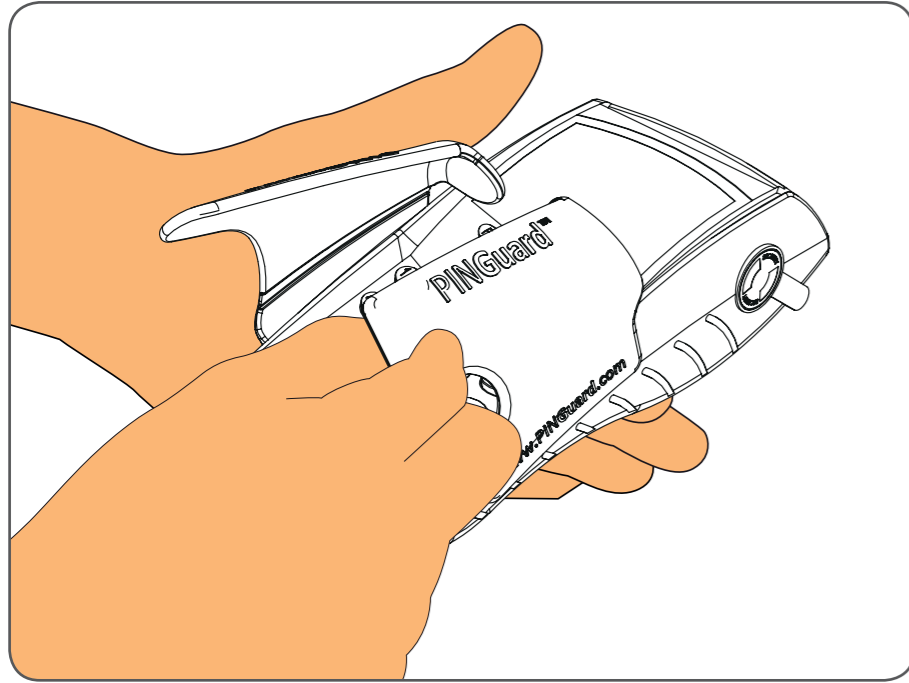


Step 1: Remove the wings by holding the top section of the wing and pull firmly down so that the adhesive foot area slowly peels off. Be careful not to pull in a way that will damage the Payment terminal.



Step 2: Using the plastic scraper remove as much excess adhesive as possible so that a very thin file of adhesive is left.



Step 3: Then using the adhesive removal pen rub firmly on the remained adhesive. The adhesive will start to soften and peel off. Keep rubbing until it is completely removed this may take 5 to 10 minutes .

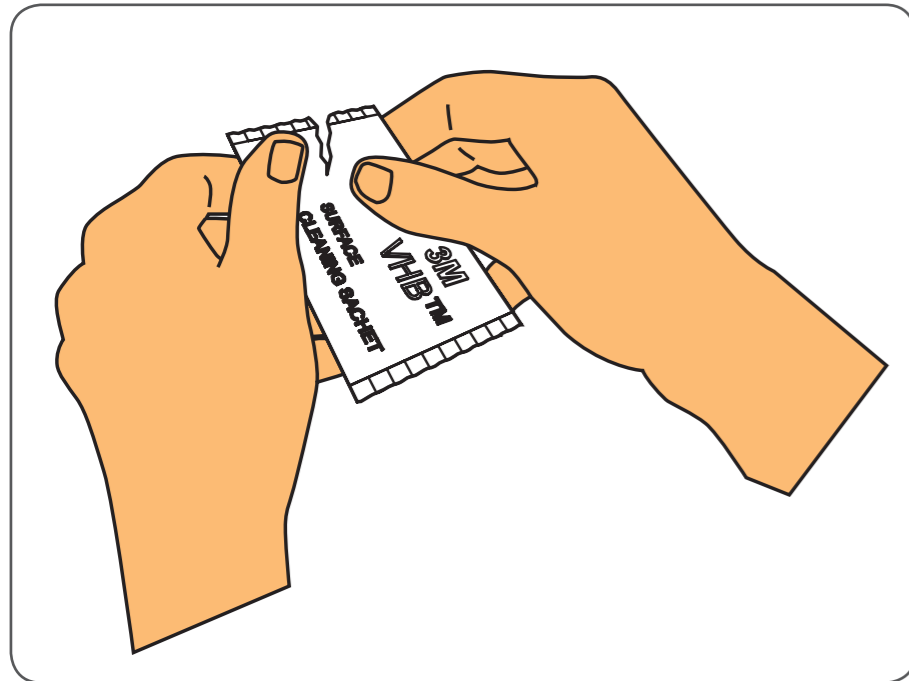

Step 4: Open cleaning sachet.



Step 5: Use the cleaning wipe to wipe away any residues.